

# Firmware Release Note

Model : SL-M2620, 2625, 2820, 2825 Series	Date :	March 7, 2017
---	--------	---------------

 
Version	Category	Change Description
<b>V3.00.01.20_0401040_1.01</b> (2-May, 2014)	Fix Defect	Google cloud print issues
<b>V4.00.01.27</b> (10-Oct, 2014)	Fix Defect	Try to printing JPEG files via AirPrint on iOS8, printer is rebooting
<b>V4.00.01.31</b> (16-Feb, 2015)	Add Func.	Apply to Google Cloud Print 2.0 Function.
<b>V4.00.01.32</b> (22-Sep, 2015)	Fix Defect	[Google Cloud Print] Print & deregistration doesn't work properly
		Wireless Connection is lost 2hours later on the Cisco Session Timeout configuration
<b>V4.00.01.33</b> (21-Apr, 2016)	Fix Defect	Fix IP changing problem in DHCP mode
<b>V4.00.01.35</b> (7-Mar, 2017)	Fix Defect	Fix wireless connection problem with Netgear AP
		Enhance Wireless Setup(Time, Compatibility)

## ※ Note

- Please do not turn off the printer and your computer until firmware update finishes.
- If you are using USB connection, disconnect all other USB printers from the PC.
- The firmware update you are about to install has been tested for compatibility with Samsung toner cartridge products ONLY.  
Installing The upgrade may cause a non-Samsung toner cartridge to malfunction.
- Do not run your printer during the firmware update.(Do not have any print job)


## How to update the firmware using a USB cable.

1. Make sure that the machine is connected to the PC with a USB cable.
2. Drag 'SWUPGRADE\_ON.prn' and drop down it on usblist.exe.

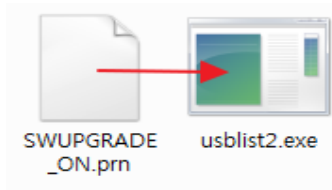

3. Drag the firmware file(\*.hd) and Drop down it on usblist2.exe.

 And then, firmware update will be started automatically.

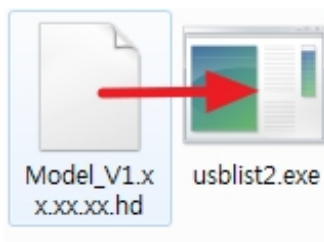

4. The firmware update will start.

Once the firmware update is complete, the machine will be rebooted automatically.

## Updating from the Network

1. Go to the SyncThruWeb Service (SWS) main home page.

Login as Admin in SyncThruWeb Service.

NOTE: Login using the Administrator ID and Password established during initial machine setup.

2. Click [Maintenance] on the top menu.

And then click [Firmware Upgrade] or Application Management > Application

3. Click Add button
4. Click [Browse]. Choose installation file by browsing file system. And click OK button
5. The uploading step will start. After this step, next step will be started automatically.
6. The firmware update will start.
7. Once the f/w update is complete, the machine power-off and power-on automatically.